



Thermal Imaging Monocular Wild-D Series User Manual












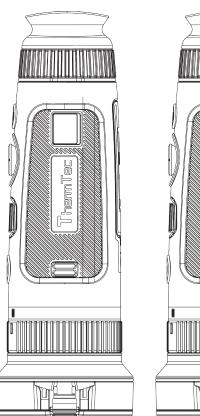



Content

About This Manual	05
Regulatory Information	06
1. Introduction	07
1.1 Device Description	07
1.2 Features	07
1.3 Application Scenarios	07
1.4 Appearance	08
2. Packing List	09
3. Operation Guide	10
3.1 Charging	10
3.2 Power on/off	11
3.3 Buttons and Controls	11
3.3.1 Buttons Combinations and Introduction	11
3.3.2. Lens Adjustment	12
3.3.3 Joystick Operation	13
3.3.3.1 Zoom	13

3.3.3.2 AI Ranging	13
3.3.3 Pseudo Color Switch	13
3.3.3.4 Target Outline Mode	14
3.3.4 Capture/Record	15
3.4 Set	15
3.4.1 Setting	15
3.4.2 System Setting	17
3.4.3 Network Connection	24
3.4.3.1 App Download	25
3.4.3.2 Connect via Hotspot	25
3.4.4 File Management	26
3.5 External Video & Data Reading	28
3.6 System Software Upgrade	28
4. Technical Data	30
4.1 Product Size & Drawing	30
4.2 Specifications	31

About This Manual

COPYRIGHT © 2024 ThermTec Technology Co., Ltd. ALL RIGHTS RESERVED.

Any and all information, including, among others, wording, pictures, graphs are the properties of ThermTec Technology Co., Ltd. or its subsidiaries (hereinafter referred to as "ThermTec"). This user manual (hereinafter referred to be "the Manual") cannot be reproduced, changed, translated, or distributed, partially or wholly, by any means, without the prior written permission of ThermTec. Unless otherwise stipulated, ThermTec does not make any warranties, guarantees or representations, express or implied, regarding to the Manual.

This Manual is applicable to Thermal Imaging Monocular.

The Manual includes instructions for using and managing the product. Pictures, charts, images, and all other information hereinafter are for description and explanation only. The information contained in the Manual is subject to change, without notice, due to firmware updates or other reasons.

ThermTec | WILD-D

Regulatory Information

CE

This product and, if applicable, the supplied accessories are marked with "CE" and comply therefore with the applicable harmonized European standards listed under the Radio Equipment Directive 2014/53/EU, the EMC Directive 2014/30/EU, the RoHS Directive 2011/65/EU.



This product and - if applicable - the supplied accessories too are marked with "UKCA" and comply therefore with the following directives: Radio Equipment Regulations 2017, Electromagnetic Compatibility Regulations 2016, Electrical Equipment (Safety) Regulations 2016, the Restriction of the Use of Certain Hazardous Substances in Electrical and Electronic Equipment Regulations 2012.



This product and - if applicable - the supplied accessories too are marked with "RoHS" and comply therefore the requirements of Directive 2011/65/EU on the restriction of the use of certain hazardous substances in electrical and electronic equipment ("RoHS recast" or "RoHS 2").



2012/19/EU (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information see: www.recyclethis.info.



Directive 2006/66/EC and its amendment 2013/56/EU (Battery Directive): This product contains a battery that cannot be disposed of as unsorted municipal waste in the European Union. See the product documentation for specific battery information. The battery is marked with this symbol, which may include lettering to indicate cadmium (Cd), lead (Pb), or mercury (Hg). For proper recycling, return the battery to your supplier or to a designated collection point. For more information see: www.recyclethis.info.



1.1 Device Description

Wild-D Series Thermal Imaging Monocular is designed with NETD less than 18mK, and equipped with a 12µm uncooled infrared detector, a 1024x768 high-definition OLED display, as well as a variety of lenses with different focal lengths. With its AI image recognition algorithm, Wild-D ensures clear views over long distances, even in harsh environments, poor visibility, or total darkness, providing reliable and high-quality visuals for night activities. Additionally, it excels at observing moving targets and adapting to various outdoor environments, making it ideal for search and rescue missions, hunting, and more.

1.2 Features

- 12μm Uncooled Infrared Detector, NETD less than 18mK;
- 1x--4x Continuous Digital Zoom;
- Al Distance Measurement;
- Various Pseudo Colors;
- Joystick Control and Wheel Focusing: Easy to One-Hand Operation;
- Detector Anti-Burn Mechanism;
- Super Large Aperture: Enhanced Capability for Temperature Radiation Capturing;
- 1024*768 Resolution with 0.39-inch OLED display;
- Up to 10 Hours of Continuous Working Life with Li-ion Battery

1.3 Application Scenarios


- Animal Observation
- Outdoor Adventure
- Law Enforcement Security
- Emergency Search and Rescue

1.4 Appearance

- 1 Lens cover
- 2 Power button
- 3 Focusing knob
- (4) Joystick
- **(5)** Capture/Record button
- 6 Diopter knob
- (7) Eyepiece cover
- (8) Compartment of replaceable battery
- (9) Type-C port
- 10 Dual FOV Switch





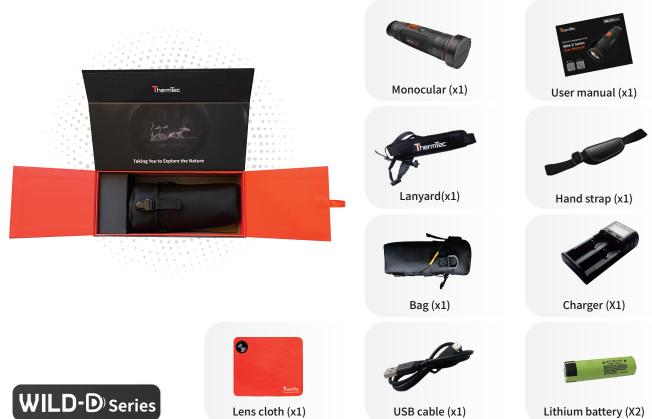



3.1 Charging

Here are two methods we could take to charge the device. Device Charging and Battery Charging.

Device Charging:

Connect the device and power adaptor directly with a type-C cable to power on the device. Alternatively, connect the device and PC to export files. Follow the below steps to charge the battery:



- Lift the cover from the USB port.
- Plug the cable provided into the USB port.
- Plug the opposite end of the cable into a USB power source.

Battery Charging:

Wild series have adopted replaceable and changeable battery design. The batteries could be taken off and charged directly, from which dramatically improves the device life.



Note:

- The battery should be fully charged prior to use.
- The battery is supposed to be taken out for long time non-using occasions.

3.2 Power on/off

Press and hold the power button to power on/power off the device.



3.3 Buttons and Controls

3.3.1 Buttons Combinations and Introduction

Before entering the main menu											
	Sh	ort Press	ess Long Press			Double Press					
Power Button	Star	dby Mode			On/Off			N/A			
Capture Button	C	Capture		Record			N/A				
	Down	Left		Rig		Center					
Joystick	Zoom in Zoom o		Al Range		Short Push	Long P	ush	Brief C	lick	Double Click	
		Zoom out	finder		Pseudo Switch	Outlin Mod		Calibra	ation	Menu	
After entering the main menu											
	Up		Down		Left		Right		Short Press		
Joystick	Move up	o Mov	ve down	Exit sub-menu		и Орен	Open Sub-menu			Confirm	

3.3.2. Lens Adjustment

Diopter Adjustment


Looking through the eyepiece, adjust the position of diopter level to optimize the image sharpness on the OLED display.



FOV Selection and Switch

Objective Lens Focusing

Manually adjust the objective lens focus when you can't see the scene clearly.







Shift the FOV from 25° to 50°



FOV Successfully Switched

3.3.3 Joystick Operation

3.3.3.1 Zoom

Push the joystick to the front to zoom in, vice versa.



3.3.3.2 Al Ranging

Push the joystick to the left to activate AI rangefinder.



3.3.3.3 Pseudo Color Switch

Brief push joystick to right to switch pseudo colors.









There are totally six pseudo colors (white hot, black hot, red hot, green, golden, violet) for user choice.













White

Black

Golden

Green

Violet

3.3.3.4 Target Outline Mode

Long push the joystick to right to enter the target outline mode.





3.3.4 Capture/Record

Image Capturing

Press Capture button to take photos. Then the photo icon in the upper left corner will flash once.



3.4 Set

Select setting and double-click the joystick to enter setting menu. Note: Select by moving the joystick, and short press the joystick to confirm the selection.

3.4.1 Setting

Image Capturing

Press to enter the Imaging Setting menu. There are five sub-menus for image setting, which are "Image Mode", "Sharpness", "Denoise", "Brightness" and "Contrast".

Video Recording

Press and hold Capture button to take videos. Then the recording icon starts flashing in the upper left corner, and the recording starts timing. Press and hold again to stop recording.

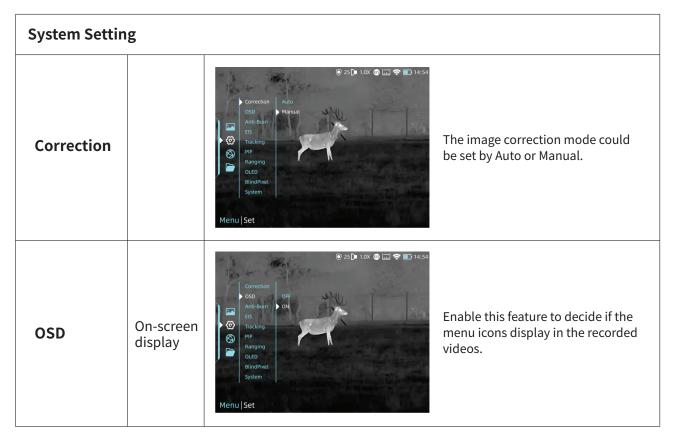




Image Settings						
	Forest	The image details would be enhanced in a way.				
Sharpness	0-10	Adjust image sharpness to make the image edge sharper. The recommended value is 5.				
Denoise	0-10	Adjust image noise to make the image cleaner. The recommended value is 5.				
Brightness	1-10	Adjust image brightness to make the image brighter. The recommended value is 5.				
Contrast	1-10	Adjust image contrast to make the target more prominent in the image. The recommended value is 5.				

3.4.2 System Setting

Press joystick to confirm **Setting** to enter the System Setting menu. Select by moving the joystick, and short-press the joystick to confirm the selection.






Detector anti-burn function, it could be set by on/off.

Anti-Burn





Once it detects harmful rays to the detector, the system will enable protection automatically.

EIS	Electronic Image Stabilization	Correction GS Ant: them Correction Cor	Electronic Image Stabilization. It could be switched on/off in the system setting.
Tracking		Correction OSD Ant:burn ES Pic Ranging OFF Dind/Wet System Menu Set	Turn on heat tracking to mark the target with the highest temperature in real time in the screen.
PIP	Picture in picture	Correction OD Anti-fourn ES Tracking PIP Ranging OLD BindHviet System	In the picture, the image is 2x enlarged from the center of the cross.

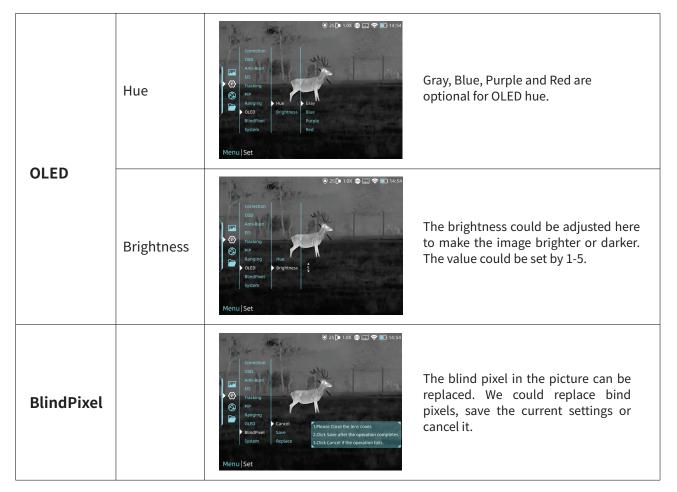



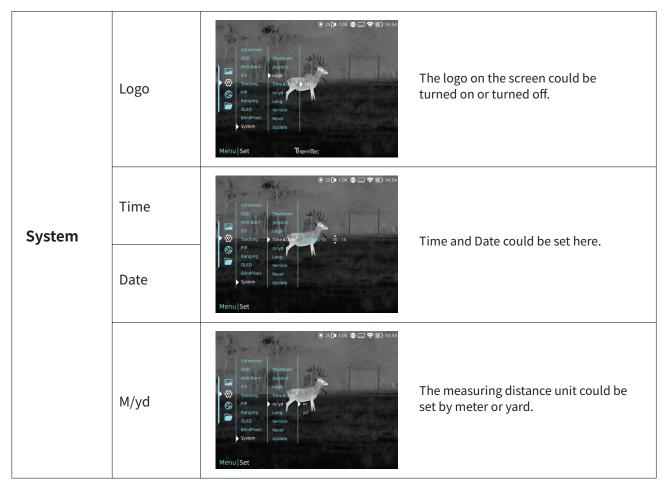

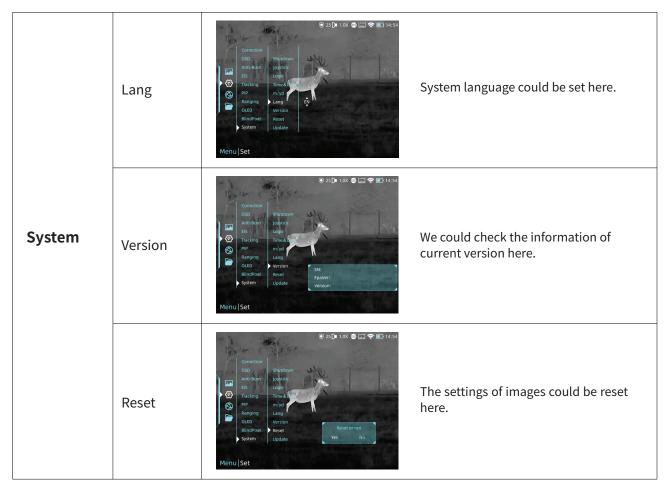



EIS function: Turn on the EIS function to reduce the impact of body shaking on the image and keep the image stable when observing distant targets.

3.4.3 Network Connection

Select Internet icon and press joystick to enter the Network Connection menu.



3.4.3.1 App Download

You may download the "ThermTec Outdoor" APP through the QR code shown on the packing box, user manual or below.



3.4.3.2 Connect via Hotspot

• Turn on device's hotspot.



- Connect mobile client with device's hotspot.
- After the connection, you could control devices freely with APP (ThermTec Outdoor).

3.4.4 File Management

Select Files and press the joystick to enter the Files. Select the image and video sub-menus to view the images and videos and play the videos.

Image Viewing

• Press the joystick to enter image files.



• After selecting a certain image, press joystick to access further operations of the image, we could delete it, check next one or delete all the images.

Back

2023-10-08_00-01-58_1024.jpg 2023-10-08_00-01-48_1024.jpg 2023-10-08_00-01-57_1024.jpg 2023-10-08_00-01-47_1024.jpg 2023-10-08_00-01-55_1024.jpg 2023-10-08_00-01-45_1024.jpg 2023-10-08_00-01-55_1024.jpg 2023-10-08_00-01-54_1024.jpg 2023-10-08_00-01-53_1024.jpg 2023-10-08_00-01-43_1024.jpg 2023-10-08_00-01-55_1024.jpg 2023-10-08_00-01-45_1024.jpg 2023-10-08_00-01-55_1024.jpg 2023-10-08_00-01-45_1024.jpg 2023-10-08_00-01-55_1024.jpg 2023-10-08_00-01-45_1024.jpg 2023-10-08_00-01-55_1024.jpg 2023-10-08_00-01-45_1024.jpg 2023-10-08_00-01-55_1024.jpg 2023-10-08_00-01-40_1024.jpg 2023-10-08_00-00

⊙ 25 🕩 1.0X 🚳 🛄 奈 💽 14:54



Video Viewing

- Select Record and press joystick to enter video files.
 Choose a certain video and press joystick to check the video.



• Further operations could be accessed here, we could delete it, check next one, pause the video or delete all the videos.



3.5 External Video & Data Reading

Video Output

Use the given AV video cable to output analog video.

Data Reading

When external display is connected, the OLED of the device automatically turns off. Power on the device, use a type-C USB cable to connect with the computer to read the video and image data in the memory.

Note: Videos, images and rav videos taken will be saved separately in folders named "record", "image" and "rav"

3.6 System Software Upgrade

Wild series thermal imaging monocular supports **"ThermTec Outdoor" APP**, which allows you to transmit the image from the thermal imager to the smartphone or tablet via Hotspot in real time mode.

Upgrading via APP

- Open ThermTec Outdoor APP.
- Turn on the hotspot of the device, and connect it with the Mobile phone.
- Select Update on the menu options.
- The downloading and upgradation would be a continuous process if there is an update.
- After finishing the update, the device will reboot.

Upgrading via PC

• Please download the corresponding upgrade package from the official website, www.thermeyetec.com. Connect the device to your PC via a Type-C data cable.




• Copy the related updating firmware to the storage file of Wild. Press joystick to select Update icon, and the system will prompt "Update".




• Enter version to check firmware version.



4.1 Product Size & Drawing

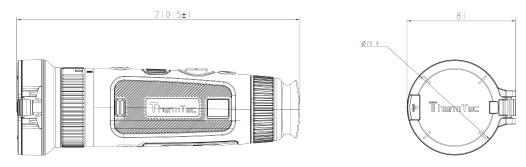

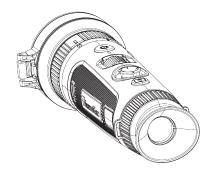

Note: Wild350D, Wild650D are of the same size.

4.2 Specifications Specifications - Wild

Model	Wild350D	Wild650D	Function				
Microbolometer			Photo/video playback	Yes			
Resolution	384x288 640x512		Language	Multiple-languages			
Pixel Pitch	Pixel Pitch 12µm			64GB			
NETD	18mK@	0300k	PIP	Yes			
Spectral range	8-14		Al Distance Measurement	Yes			
			Heat Track	Yes			
	Frame rate 50HZ			Yes			
Detection Range	Detection Range 1300m/2600m			Yes			
Optics			Burn prevention	Yes			
Objective lens	Objective lens 25mm/50mm			Yes			
F Number	F Number F0.9/F0.9			Battery			
m@100m	18.4x13.8/9.2x6.9 30.7x24.6/15.4x12.3		Internal battery	Replaceable and Rechargeable Li-ion Battery (18650x1)			
Field of view	10.5° x 7.9°/5.3° x 4°	17.5° x 14°/8.8° x 7.0°	Battery life	10h	8h		
Magnification	2.4X-4.8X	1.4X-2.8X		Interface			
Digital Zoom	1-4X continu	ious zoom	Type-C	Supports battery charging, data transfer, USB video output			
Eve relief				Hotspot Yes, App remote control			
Exit pupil	6m	m	Environment				
Diopter				-20°C~+50°C			
	Display			IP67			
Type AMOLED			Weight, g	647.5±15			
Resolution				210(L)x81(W)x71(H)			
Display size 0.39 inch			Accessories				
Color palette 6			External Cable	USB cable			
Image mode	Image mode Forest/Target			Palm strap/Protective bag/Non-dust cloth and etc.			





ThermTec Technology Co., Ltd.

Email: info@thermeyetec.com Web: www.thermeyetec.com

COPYRIGHT © 2024 ThermTec Technology Co., Ltd. ALL RIGHTS RESERVED.